

# User Manual

## AMR-220

### Mini Digital Amplifier



**All Rights Reserved**

Version: AMR-220\_2017V1.0

## Preface

Read this user manual carefully before using the product. Pictures shown in this manual is for reference only, different model and specifications are subject to real product.

This manual is only for operation instruction only, not for any maintenance usage. The functions described in this version are updated till November 2, 2017. In the constant effort to improve our product, we reserve the right to make functions or parameters changes without notice or obligation. Please refer to the dealers for the latest details.

## Trademarks

Product model and its logo are trademarks. Any other trademarks mentioned in this manual are acknowledged as the properties of the trademark owner. No part of this publication may be copied or reproduced without our prior written consent.

## FCC Statement

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. It has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation.

Operation of this equipment in a residential area is likely to cause interference, in which case the user at their own expense will be required to take whatever measures may be necessary to correct the interference

Any changes or modifications not expressly approved by the manufacture would void the user's authority to operate the equipment.



---

## SAFETY PRECAUTIONS

To insure the best from the product, please read all instructions carefully before using the device. Save this manual for further reference.

- Unpack the equipment carefully and save the original box and packing material for possible future shipment
- Follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- Do not dismantle the housing or modify the module. It may result in electrical shock or burn.
- Using supplies or parts not meeting the products' specifications may cause damage, deterioration or malfunction.
- Refer all servicing to qualified service personnel.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Do not put any heavy items on the extension cable in case of extrusion.
- Do not remove the housing of the device as opening or removing housing may expose you to dangerous voltage or other hazards.
- Install the device in a place with fine ventilation to avoid damage caused by overheat.
- Keep the module away from liquids.
- Spillage into the housing may result in fire, electrical shock, or equipment damage. If an object or liquid falls or spills on to the housing, unplug the module immediately.
- Do not twist or pull by force ends of the optical cable. It can cause malfunction.
- Do not use liquid or aerosol cleaners to clean this unit. Always unplug the power to the device before cleaning.
- Unplug the power cord when left unused for a long period of time.
- Information on disposal for scrapped devices: do not burn or mix with general household waste, please treat them as normal electrical wastes.

---

## Table of Contents

1. Introduction .....	1
1.1. Introduction to AMR-220.....	1
1.2. Features .....	1
1.3. Package List.....	2
2. System Connection Introduction .....	3
2.1. Audio Output .....	3
2.1.1. Default Output: 2x20Watt@4Ohm .....	3
2.1.2. Bridge Connection: 1x40Watt@8Ohm.....	3
2.1.3. Dual-mono Output .....	3
2.2. Microphone Input .....	4
2.2.1. 48V Phantom Power Input.....	4
2.2.2. MIC Input.....	4
2.2.3. LINE Input.....	4
3. Operation of the Control Panel and the IR Remote .....	5
3.1. Operation of the Control Panel.....	5
3.1.1. Audio Switching .....	5
3.1.2. Volume/EQ Controlling .....	5
3.2. Usage of the IR Remote.....	6
4. System Diagram .....	7
5. Communication Protocol and Command Codes .....	8
6. Specification.....	10
7. Panel Drawing .....	11
8. Troubleshooting & Maintenance .....	12
9. Customer Service .....	13

## 1. Introduction

### 1.1. Introduction to AMR-220

The AMR-220 is a compact-size digital amplifier (Class-D) with 3 inputs (2 line in and 1 balanced MIC). It is integrated with powerful functions, including bridge connection, dual-mono, EQ control, microphone mixer etc.

It has a good application in different places, including classroom, small meeting room, lecture hall, bar, pub etc.

### 1.2. Features

- 2x20Watt@4Ohm as the default amplifier output.
- Bridge connection function. User can switch the AMR-220 to be 1x40Watt@8Ohm by bridge connection.
- Two stereo audio inputs, switchable by button, IR remote & RS232.
- Volume/Bass/Treble controllable by buttons IR remote & RS232.
- MIC port can support balance/unbalance signal, suppress the external noise effectively.
- Line audio output at 3.5mm jack, with volume controllable.
- Dual-mono function. User can sum up the stereo audio to two times mono audio.
- MIC mixer function. The microphone will be mixed to the line audio output, and be controlled separately.
- MIC input supports 48V phantom power, dynamic MIC and wireless MIC.
- Auto noise gate. It keeps detecting the audio and MIC input, will mute the output when there is no input.
- Ultra low inrush current, no need for power sequencing. This allows multiple AMR-220 to be powered on simultaneously without overloading power circuits.
- Convection cooler, fan is not needed.
- Antistatic case design: providing good protection for long-term and stable performance.

### **1.3. Package List**

- 1 x AMR-220
- 2 x Pluggable Terminal Blocks
- 1 x RS232 Cable
- 1 x Power Adapter
- 1 x Power Cord
- 4 x Plastic Cushions
- 1 x User Manual

**Note:**


- The IR remote and its battery are offered for charge separately.
- The IR receiver is also offered for charge.
- Please confirm if the product and the accessories are all included, if not, please contact with the dealers.

## 2. System Connection Introduction

### 2.1. Audio Output

#### 2.1.1. Default Output: 2x20Watt@4Ohm

The default output of amplifier is 2x20Watt@4Ohm, so user can connect the amplifier output in the regular way. As the picture below:

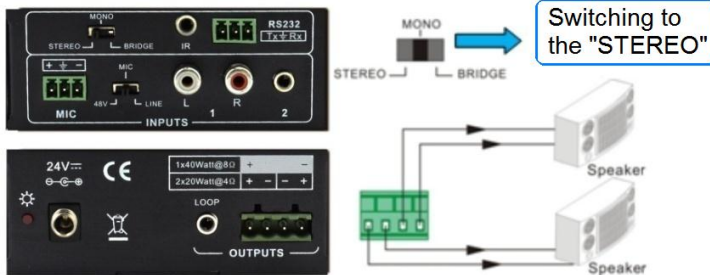


Connecting the four pins, like this

#### 2.1.2. Bridge Connection: 1x40Watt@8Ohm

The AMR-220 has the bridge connection, to double the output power at 1x40Watt@8Ohm. It will sum up the input left channel and input right channel to be mono output, and the power is up to 40Watt.

The bridge connection is:

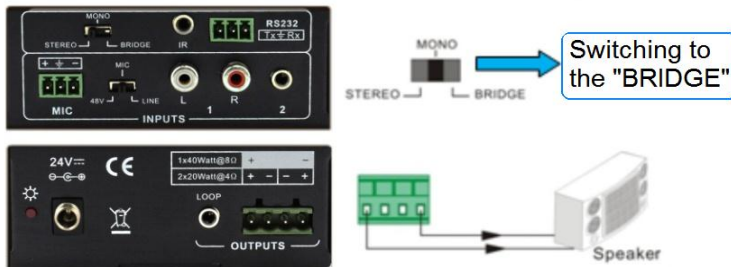


Connecting the two pins, like this

#### 2.1.3. Dual-mono Output

The AMR-220 also has the function of double-mono output. It can sum up the left and right channel, to be the mono audio output. In this way, the both of the outputs are showing the same mono audio.


The connection is:

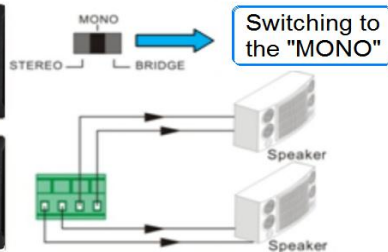

Connecting the four pins, like this

## 2.2. Microphone Input

The microphone input of AMR-220 has three modes, and different modes use different connections, as the picture below:

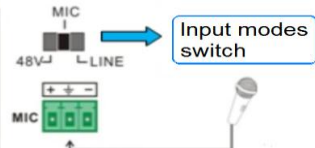

### 2.2.1. 48V Phantom Power Input

When the switch turns to “48V”, the MIC input will provide a 48V phantom power. This is usually used for power supply for condenser microphone, Connection is: “+” connects to positive, “-” connects to negative and “⊥” to ground.

**Note:** In this mode, only condenser microphone can be connected with.

### 2.2.2. MIC Input

When the switch turns to “MIC”, the microphone input is used for connecting with dynamic microphone. There are two different connections:

#### 1) Unbalanced connection:

“⊥” connects to ground, and “-” connects to signal.

“⊥” connects to ground, and “+” connects to signal.

#### 2) Balanced connection: “+” connects to positive, “-” connects to negative and “⊥” connects to ground.

### 2.2.3. LINE Input

When the switch turns to “LINE”, the microphone input is used for connecting with normal audio or wireless microphone output. There are two different connections:

#### 1) Unbalanced connection:

“⊥” connects to ground, and “-” connects to signal.

“⊥” connects to ground, and “+” connects to signal.

#### 2) Balanced connection: “+” connects to positive, “-” connects to negative and “⊥” connects to ground.




### 3. Operation of the Control Panel and the IR Remote

#### 3.1. Operation of the Control Panel

The buttons provides the control of volume/EQ control and switching. The following content introduces audio switching and EQ control in detail.

##### 3.1.1. Audio Switching


There are two switchable stereo audio inputs, one 2xRCA input, and one 3.5mm jack input, switchable through the buttons as below:

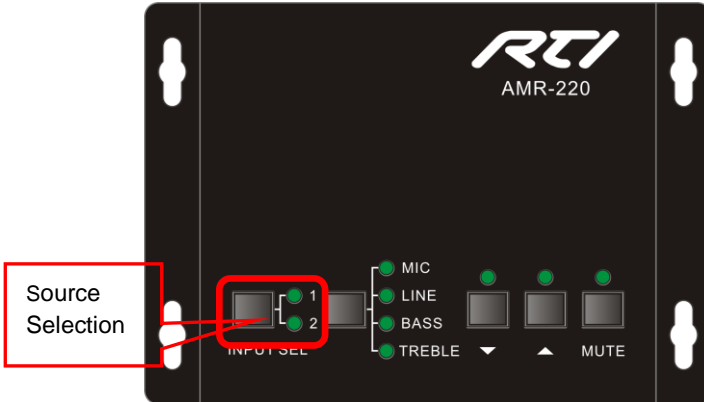

##### 3.1.2. Volume/EQ Controlling

The line volume and MIC volume can be controlled by the buttons.

The MIC Volume/LINE volume/LINE bass/LINE treble will be selected by the buttons, and controlled up/down/mute by the function buttons. Please check the picture below:

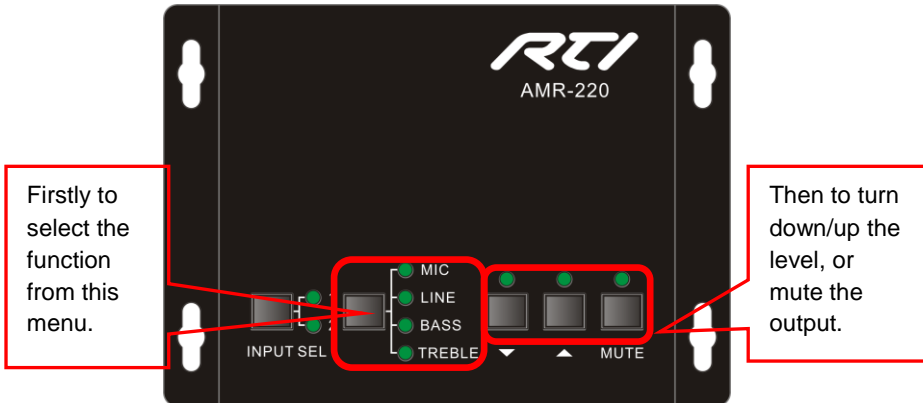


For example, to turn up the line volume, you should select the "LINE" first, and then press the button "▲".

### 3.2. Usage of the IR Remote

Audio Inputs  
1: RCA dual-mono audio inputs  
2: 3.5mm jack

Audio Controlling Modes  
**MIC**: turn up/down the microphone volume.  
**LINE**: turn up/down the line volume.  
**BASS**: bass tuning  
**TREBLE**: treble of line volume.

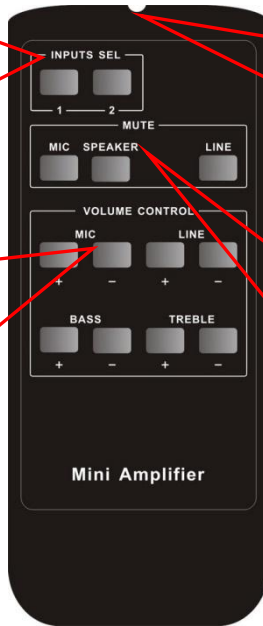

Use to transmit the infrared signal send by the IR remote.

Mute Mode:  
**MIC**: Mute the microphone volume.  
**LINE**: Mute the line volume.  
**SPEAKER**: Unmute


IR receiver head, works in conjunction with the IR remote. Please point the IR remote at the IR receiver when use, to avoid getting out of control as there is no signal detected.



3.5mm jack, insert it into the specialized socket (3.5mm) to connect the IR receiver with the amplifier

**Note:** The IR remote, the IR receiver, and the battery of the IR remote are all offered for charge.

## 4. System Diagram

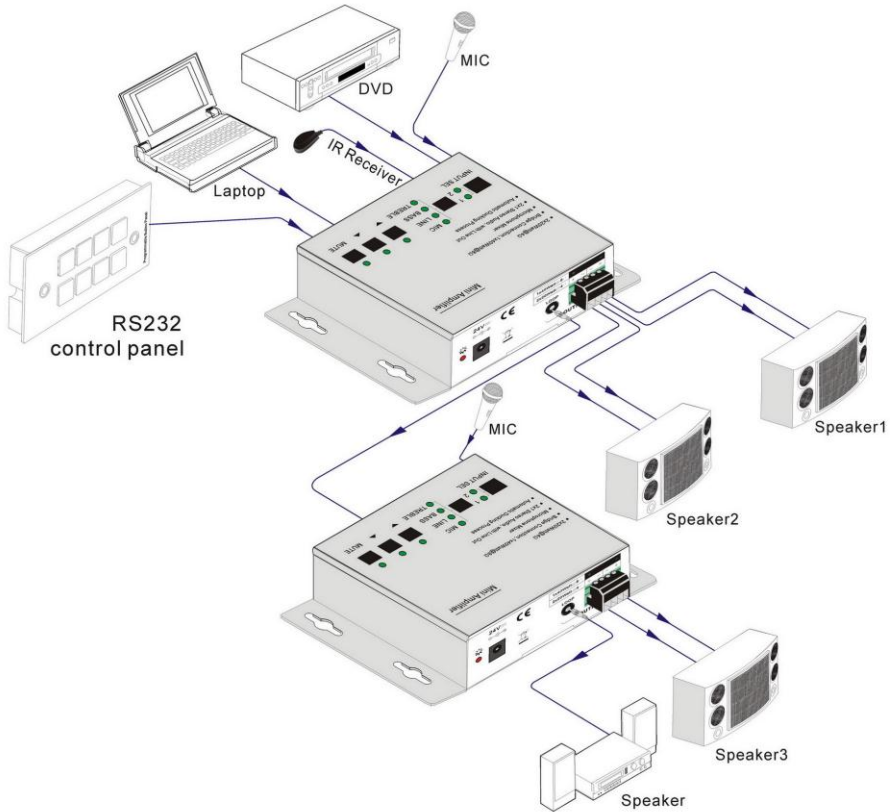

## 5. Communication Protocol and Command Codes

**Communication Protocol:** RS232 Communication Protocol

Baud rate: 9600

Data bit: 8

Stop bit: 1

Parity bit: none

Command	Description	Feedback Example
#RST!	Factory reset.	@RST:OK!
#RAV:[XX]A01!	Route audio input [XX] to output 01. XX =01 or 02.	@RAV:AUDIO 01 TO OUT 01!
#VOL:SRCMUTE!	Mute source audio (01 or 02).	@VOL:SRC MUTE!
#VOL:SRCUNMUTE!	Unmute source audio (01 or 02).	@VOL:SRC UNMUTE!
#VOL:SRCUP!	Volume up for source audio. XX=00~60	@VOL:SRC 30!
#VOL:SRCDN!	Volume down for source audio. XX=00~60	@VOL:SRC 30!
#VOL:SRC[XX]!	Set volume to [XX] for source audio. XX=00~60	@VOL:SRC 30!
#VOL:MICMUTE!	Mute microphone audio.	@VOL:MIC MUTE!
#VOL:MICUNMUTE!	Unmute microphone audio.	@VOL:MIC UNMUTE!
#VOL:MICUP!	Volume up for microphone audio. XX=00~60	@VOL:MIC 30!
#VOL:MICDN!	Volume down for microphone audio. XX=00~60	@VOL:MIC 30!
#VOL:MIC[XX]!	Set Volume to [XX] for microphone audio. XX=00~60	@VOL:MIC 30!
#VOL:OUTMUTE!	Mute output audio (Speaker).	@VOL:OUT MUTE!
#VOL:OUTMUTE!	Unmute output audio (Speaker).	@VOL:OUT UNMUTE!
#VOL:BASUP!	Volume up for output audio. XX=00~08	@VOL:BAS 00!
#VOL:BASDN!	Volume down for output audio. XX=00~08	@VOL:BAS 00!
#VOL:BAS[XX]!	Set volume to [XX] for Output Audio. XX=00~08	@VOL:BAS 00!
#VOL:TREUP!	Volume up for output Audio. XX=00~08	@VOL:TRE 00!
#VOL:TREDN!	Volume down for output Audio. XX=00~08	@VOL:TRE 00!
#VOL:TRE[XX]!	Set Volume to [XX] for output audio.	@VOL:TRE 00!
#VOL:GATEON!	Gate ON.	@VOL:GATE ON!
#VOL:GATEOFF!	Gate OFF.	@VOL:GATE OFF!

#RPT:STATUS?!	Report status.	@RAV:AUDIO 01 TO OUT 01! @VOL:OUT UNMUTE! @VOL:SRC UNMUTE! @VOL:SRC 30! @VOL:MIC MUTE! @VOL:MIC 45! @VOL:BAS 00! @VOL:TRE 00! @VOL:GATE OFF!
---------------	----------------	--



**Note:**

- The letter inside bracket [ ] is the variable code, which is changeable.
- The bracket [ ] is not included to the RS232 commands.
- Any dot “!” after the letters is part of the commands.

## 6. Specification

<b>Audio Input</b>	
Input	(2) stereo audio; (2) MIC
Input Connector	(2) RCA; (1) 3.5mm jack; (1) pluggable terminal block (3P,3.81mm)
Input Impedance	>10KΩ
<b>Audio Output</b>	
Output	(1) amplifier; (1) stereo audio
Output Connector	(1) 3.5mm jack; (1) pluggable terminal block (4P, 5.08mm)
Output Impedance	50Ω/stereo, 4~8Ω/Amplifier
<b>Audio General</b>	
Frequency Response	20Hz ~ 20KHz
CMRR	>70dB@20Hz~20KHz
SNR	80dB at maximum output
Bandwidth	20Hz ~ 25KHz
Stereo Channel Separation	>75dB@20Hz to 20KHz
THD + Noise	1%@1KHz, 0.3%@20KHz at nominal level
Voltage Gain	32dB
Power Output	2x20 Watts (4 Ohms)
<b>Control Function</b>	
RS232 Control	3-hole phoenix connector
Panel Control	Optional button control
IR Remote	Optional IR remote

## 7. Panel Drawing

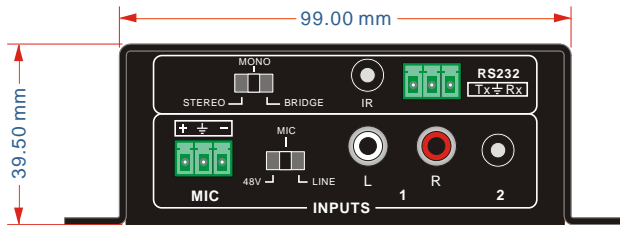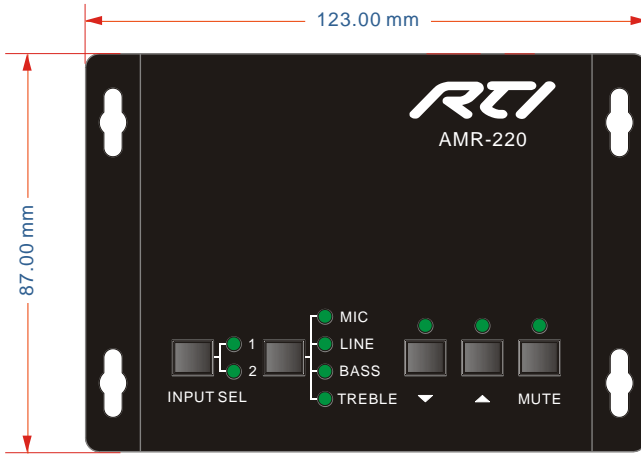

---

## 8. Troubleshooting & Maintenance

- 1) When there is no output audio:
  - Check if there is any signal at the input.
  - Check if there is any signal at the output.
  - We can check these by using an oscilloscope or a multimeter. If there is no signal input/output, maybe the input/output cables broken or the connectors loosen, please change for another cable.
  - Check if the output port number is the same with the controlled one.
  - If not the problem mentioned above, probably there is something broken inside the unit, please send it to the dealer for repairing.
  
- 2) If the **POWER** indicator doesn't work or no respond to any operation, please make sure the power cord connection is good.
  
- 3) If the output sound is interfered, please make sure the system is grounded well.
  
- 4) If the static becomes stronger when connecting the audio connectors, it probably due to bad grounding, please check the grounding and make sure it connected well, otherwise it would damage the converter.
  
- 5) If the AMR-220 amplifier cannot be controlled by the keys on the front panel, RS232 port or IR remote, the unit may has already been broken. Please send it to the dealer for repairing.



## 9. Customer Service

The return of a product to our Customer Service implies the full agreement of the terms and conditions hereinafter. These terms and conditions may be changed without prior notice.

### 1) Warranty

The limited warranty period of the product is fixed 3 (three) years.

### 2) Scope

These terms and conditions of Customer Service apply to the customer service provided for the products or any other items sold by authorized distributor only.

### 3) Warranty Exclusions:

- Warranty expiration.
- Factory applied serial number has been altered or removed from the product.
- Damage, deterioration or malfunction caused by:
  - ✓ Normal wear and tear.
  - ✓ Use of supplies or parts not meeting our specifications.
  - ✓ No certificate or invoice as the proof of warranty.
  - ✓ The product model showed on the warranty card does not match with the model of the product for repairing or had been altered.
  - ✓ Damage caused by force majeure.
  - ✓ Servicing not authorized by distributor.
  - ✓ Any other causes which does not relate to a product defect.
- Shipping fees, installation or labor charges for installation or setup of the product.

### 4) Documentation:

Customer Service will accept defective product(s) in the scope of warranty coverage at the sole condition that the defeat has been clearly defined, and upon reception of the documents or copy of invoice, indicating the date of purchase, the type of product, the serial number, and the name of distributor.

**Remarks:** For further assistance or solutions, please contact your local distributor.







**Remote Technologies Incorporated**

**5775 12th Avenue East, Suite 180**

**Shakopee, MN 55379**

**Tel: 952-253-3100**

**Fax: 952-253-3131**

**[www.rticorp.com](http://www.rticorp.com)**